

HumidAire 2i™

Reorder number: 308152/1 03 07

USER'S MANUAL

English

RESMED

HumidAire 2i™

Reorder number: 308152/I 03 07

USER'S MANUAL

English

Manufactured by:

ResMed Ltd 97 Waterloo Road North Ryde NSW 2113 Australia
Tel: +61 (2) 9886 5000 or 1 800 658 189 (toll free) Fax: +61 (2) 9878 0120 Email: reception@resmed.com.au

Distributed by:

ResMed Corp 14040 Danielson Street Poway CA 92064-6857 USA

Tel: +1 (858) 746-2400 or 1-800-424-0737 (toll free) Fax: +1 (858) 746-2900 Email: reception@resmed.com

ResMed (UK) Limited 65 Milton Park Abingdon Oxfordshire OX14 4RX UK

Tel: +44 (1235) 862 997 Fax: +44 (1235) 831 336 Email: reception@resmed.co.uk

ResMed Asia Pacific Ltd 97 Waterloo Road North Ryde NSW 2113 Australia

Tel: +61 (2) 9886 5000 or 1 800 991 900 (toll free) Fax: +61 (2) 9889 1471 Email: reception@resmed.com.au

ResMed Finland Niittykatu 6 FIN 02200 ESPOO Suomi

Puh: +358 9 8676820 Faksi: +358 9 86768222 Sähköposti: reception@resmed.fi

ResMed GmbH & Co. KG Rudolfstraße 10 D-41068 Mönchengladbach Deutschland

Tel: +49 (0) 2161-3521-0 (Reception), +49 (0) 180 22 22 668 (Service-Telefon; 0.06 €/Anruf),

+49 (0) 180 22 66 888 (Wartungstelefon; 0.06 €/Anruf) Fax: +49 (0) 2161-3521-1499 Email: reception@resmed.de

ResMed Japan Nihonbashi Hisamatsu Bldg. 4F, 2-28-1 Nihonbashi-Hamacho, Chuo-Ku, Tokyo 103-0007, Japan

Tel: +81 (3) 3662 5056 Fax: +81 (3) 3662 5040

ResMed Malaysia Sdn Bhd Suite E-10-20, Plaza Mon't Kiara No. 2 Jalan 1/70C Mon't Kiara 50480 Kuala Lumpur

Malaysia Tel: +60 3 6201 7177 Fax: +60 3 6201 2177 Email: reception@resmed.com.my

ResMed NZ Ltd PO Box 51-048 Pakuranga Auckland New Zealand

Tel:+64 274 737 633 Fax:+64 9 239 0193 Email: reception@resmed.co.nz

ResMed SA Parc de la Bandonnière 2, rue Maurice Audibert 69800 Saint-Priest France

Tél: +33 (0) 4 37 251 251 Fax: +33 (0) 4 37 251 260 Email: reception@resmed.fr

ResMed Singapore Pte Ltd 57 Ubi Ave 1 #07-09 Ubi Centre Singapore 408936

Tel: +65 6284 7177 Fax: +65 6284 7787 Email: reception@resmed.com.sg

ResMed Spain SL C/Arturo Soria, 245 28033 Madrid España

Tel: +34 (93) 5908154 Fax: +34 (93) 5908153 Email: angelo@resmed.es

ResMed Sweden AB Industrigatan 2 S-461 37 Trollhättan Sverige

Tel: +46 520 420 110 Fax: +46 520 397 15 Email: reception@resmed.se

Labhardt AG Thannerstrasse 57 CH-4054 Basel Schweiz


Tel: +41 (061) 307 9711 Fax: +41 (061) 307 9722 Email: info@labhardt.ch

US DESIGNATED AGENT: ResMed Corp

EU AUTHORIZED REPRESENTATIVE: ResMed (UK) Ltd

www.resmed.com

Patents pending. Protected by design registrations: AU 147335, CH 128.711, FR 021407, GB 3001820, GB 3001821.
Other designs pending

 , AutoSet Spirit, HumidAire 2i and SmartStart are trademarks of ResMed Ltd.

© ResMed Ltd 2003.


0120

CONTENTS

INTRODUCTION	1
MEDICAL INFORMATION	1
THE HUMIDAIRE 2i	3
PREPARING FOR USE	5
OPERATING INSTRUCTIONS	9
CLEANING AND MAINTENANCE	13
TROUBLESHOOTING	17
TECHNICAL SPECIFICATIONS	19
INDEX.....	21

INTRODUCTION

The ResMed HUMIDAIRE 2i™ is designed to humidify the air delivered to the airway during continuous positive airway pressure (CPAP) automatic positive airway pressure (APAP) and bilevel therapy.

Nasal congestion or dryness of the nose, mouth or throat may be experienced during therapy. These symptoms are caused by dry climates, cold air temperatures, the airflow delivered from the CPAP, APAP or bilevel system and mouth leak. Moist air helps relieve symptoms of dryness and can make therapy more comfortable.

The HUMIDAIRE 2i is designed to form a single heated humidification unit when attached to a CPAP, APAP or bilevel device.

DEFINITIONS

This manual contains special terms and icons that appear in the margins to draw your attention to specific and important information.



WARNING

Alerts you to possible injury.



CAUTION

Explains special measures for the safe and effective use of the device.

Note: *Is an informative or helpful note.*

USER/OWNER RESPONSIBILITY

The user or owner of this system shall have sole responsibility and liability for any injury to persons or damage to property resulting from:

- operation which is not in accordance with the operating instructions supplied
- maintenance or modifications carried out unless in accordance with authorised instructions and by authorised persons.

Please read this manual carefully before use.

MEDICAL INFORMATION

INTENDED USE

The HUMIDAIRE 2i is indicated for humidification of the air delivered from specific ResMed CPAP, APAP and bilevel devices. Refer to the relevant device manual for information regarding its compatibility with the HUMIDAIRE 2i. Contact your equipment supplier or ResMed office if you require further information.

The HUMIDAIRE 2i is for use only as recommended by a physician.

CONTRAINDICATIONS

The HUMIDAIRE 2i is contraindicated for use with patients whose supraglottic airways have been bypassed. Please also refer to the relevant system manual for contraindications associated with CPAP, APAP and bilevel therapy.

WARNINGS AND CAUTIONS

The following are general warnings and cautions. Specific warnings and cautions appear next to the relevant instructions in the manual.



WARNINGS

- Use the **HUMIDAIRE 2i** only for its intended use as described in this manual.
- The **HUMIDAIRE 2i** is designed only for use with specific ResMed CPAP, APAP or bilevel devices. Do not use the **HUMIDAIRE 2i** with any other devices.
- The **HUMIDAIRE 2i** should only be used with delivery tubes or accessories specified in this manual. Connection of other delivery tubes or accessories could result in injury, or damage to the device.
- The **HUMIDAIRE 2i**, including the associated tubing, is for single-patient use and must not be re-used on another person. This is to avoid the risk of cross-infection.
- Always place the **HUMIDAIRE 2i** device lower than the level of the patient. If it is placed at or above the level of the patient, heated water may flow down the air tubing and into the mask.
- Do not attempt to dismantle the **HUMIDAIRE 2i** docking station. There are no user-serviceable parts inside. Repairs and internal servicing should only be performed by an authorised service agent.
- Take care when handling the **HUMIDAIRE 2i**. The water in the water chamber may be hot.
- If liquids are inadvertently spilled on the **HUMIDAIRE 2i** docking station, unplug the CPAP, APAP or bilevel device from the power outlet and allow the docking station to drain and dry before using.
- The water chamber should not be connected to the docking station when transporting the **HUMIDAIRE 2i** in the carry bag. Place the water chamber in a separate compartment in the carry bag.
- Make sure that the water chamber is empty and thoroughly dried before transporting the **HUMIDAIRE 2i**.
- Do not operate the **HUMIDAIRE 2i** if the CPAP, APAP or bilevel device has a damaged power cord or plug.
- There exists the possibility that if the device is placed above the level of the patient and is tipped over, or if the tubing is filled with condensate, the mask might fill with water. The **HUMIDAIRE 2i** should therefore be used with caution in patients who are unable to guard their airway, or are unable to pull the mask off, for example following a stroke. Attention should be given to the relative risks and benefits.
- Do not operate the **HUMIDAIRE 2i** if it is not working properly or if any part of it has been dropped or damaged.
- Keep the power cord away from heated surfaces.
- Do not drop or insert any object into any opening or tubes.
- Do not use the **HUMIDAIRE 2i** in the presence of flammable or explosive materials.

THE HUMIDAIRE 2i

HUMIDAIRE 2i COMPONENTS

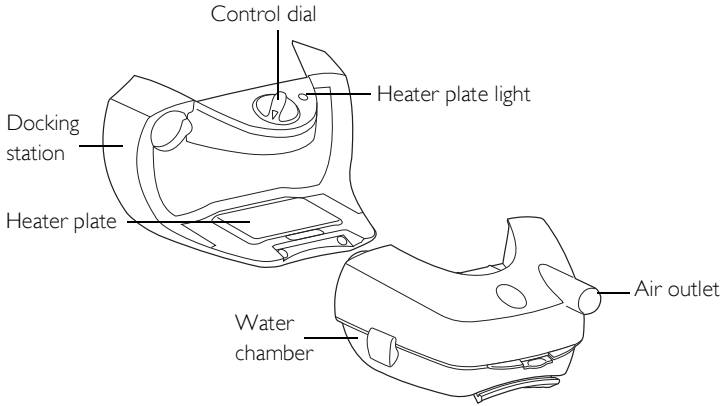


Figure 1 : Components of the HumdiAire 2i

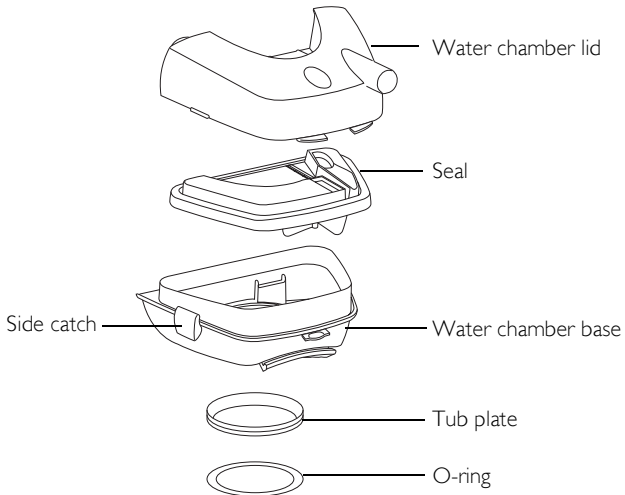


Figure 2 : Water chamber components

PREPARING FOR USE


SETTING UP THE HUMIDAIRE 2i




WARNING

Make sure that the CPAP, APAP or bilevel device is switched off at the power outlet before connecting the HUMIDAIRE 2i.

- 1 Remove the front cap from the device. To do this:
 - i. Press the latch underneath the front cap.
 - ii. While pressing the latch, lift and pull the front cap away from the device. The front cap should detach from the bottom and right side. The front cap should still be attached to the left side.

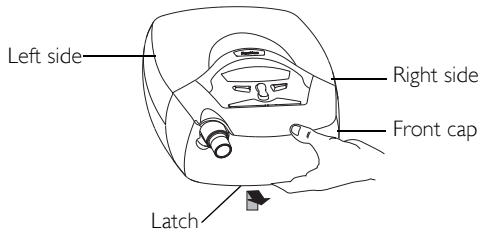


- iii. Hold the device down with your left hand. With your right hand, firmly pull the right side of the front cap out and then up until the whole front cap comes off.

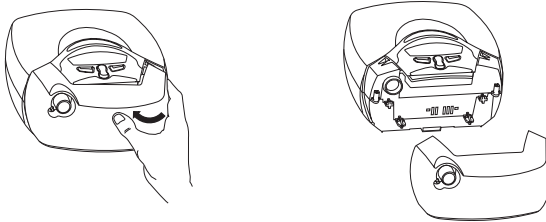


Notes

To replace the front cap: a) Align the air outlet connector inside the front cap to the air outlet on the device. b) Push the front cap firmly onto the device until it clicks into place. Remember to take the front cap with you when travelling, in case you need to use your CPAP, APAP or bilevel device without a humidifier.

- 2 Separate the HUMIDAIRE 2i water chamber from the docking station. To do this, lift the latch at the bottom of the water chamber and pull the water chamber away from the docking station.

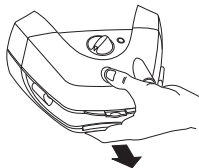

- 3 Slide the humidifier docking station (with the water chamber detached) onto the device until it clicks into place.

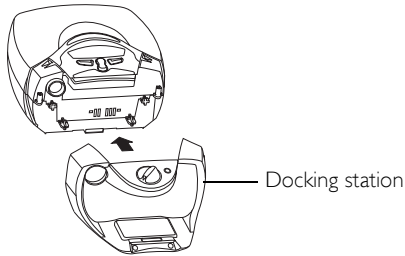


Notes

Under normal operation, there is no need to remove the HumidAire 2i docking station once it is attached to the CPAP, APAP or bilevel device. If you need to remove it, press the latch underneath the docking station and pull it away from the device.

When removing the docking station, ensure that the water chamber is removed first.

-
- 4 Insert the power cord into the socket at the rear of the device. Plug the other end of the power cord into a power outlet.

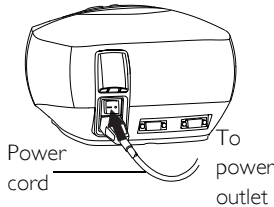

WARNING

- Make sure that the CPAP, APAP or bilevel device is switched off at the power outlet before connecting the HUMIDAIRE 2i.
- Make sure the power cord and plug are in good condition and the equipment is not damaged.

- 5 Place the device on a firm, flat surface near your bed. Make sure that it is placed at a level lower than your sleeping position so that any excess condensation drains back into the water chamber.



CAUTION

Be careful not to place the device where it can be bumped into and knocked over.


-
- 6



WARNING

Do not fill the water chamber while it is attached to the docking station and the CPAP, APAP or bilevel device.

Turn the water chamber so that the air outlet points up. Over a sink, carefully fill the water chamber through the air outlet up to the maximum water level mark shown on the side of the water chamber base.

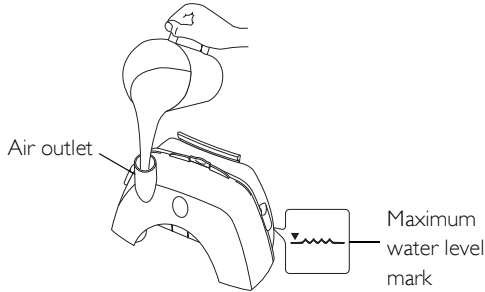


The HUMIDAIRE 2i should be filled with fresh water before use. Always ensure that the water chamber is clean. See “Cleaning and Maintenance” on page 13.

WARNING
 Do not overfill the water chamber, as water may enter the CPAP, APAP or bilevel device and air tubing.


CAUTION
 Do not use additives, in particular aromatic additives (eg scented oils and perfumes). They may reduce the humidification output of the device and/or cause deterioration of the water chamber materials.

- Carefully, slide and push the filled water chamber onto the humidifier docking station (already attached to the CPAP, APAP or bilevel device) until it clicks down into place. Ensure that the water chamber is fully engaged.

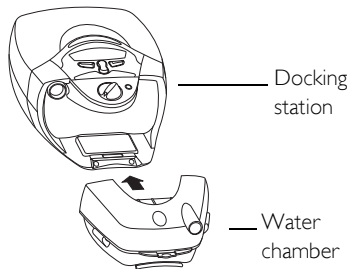

- WARNING**
- Always connect the HUMIDAIRE 2i docking station before connecting the water chamber.
 - To prevent water from entering the CPAP, APAP or bilevel device, only move or transport it with the HUMIDAIRE 2i attached if the water chamber is empty and thoroughly dry.

- 8 Connect one end of the air tubing firmly onto the air outlet on the water chamber and the other end to the mask system.

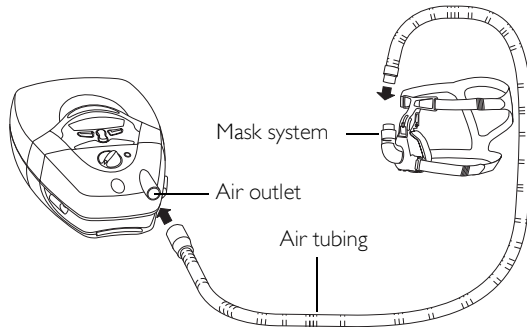


The **HUMIDAIRE 2i** is now ready for use. To start treatment, see “Operating Instructions” on page 9.

OPERATING INSTRUCTIONS

STARTING TREATMENT

The HUMIDAIRE 2i should be filled with fresh water and attached to the CPAP, APAP or bilevel device, with the air tubing and mask system connected. See "Setting Up the HumidAire 2i" on page 5.

- 1 Switch on the power at the power outlet. Switch the main power switch at the back of the device ON.

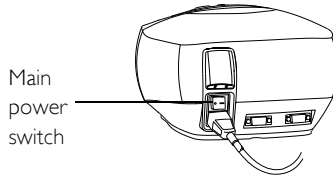

When the device is turned on, a WELCOME message is displayed on the LCD screen and then a prompt for the Warm-Up feature (not available on all models).



The Warm-Up Feature is automatically displayed when the HUMIDAIRE 2i is connected to the CPAP, APAP or bilevel device. When activated, this feature allows the water to warm up before you start treatment.

Note: *The device automatically detects the presence or absence of the HumidAire 2i. There is no need to enter the menus to change the humidifier setting.*

- 2 Pre-heat the water before starting treatment by activating the Warm-Up Feature. Skip this step if you do not wish to use the Warm-Up feature.


WARM-UP FEATURE (NOT AVAILABLE IN ALL MODELS)

The HUMIDAIRE 2i provides a convenience feature called 'Warm-Up'. You can use this feature to pre-heat the water in the humidifier prior to starting treatment. The result is that the air is comfortably humidified at the start of treatment.

You can begin using the device at any time during the humidifier 'Warm-Up' period. The 'Warm-Up' feature will automatically turn off after 30 minutes if treatment has not started.

To activate the Warm-Up Feature:

- i. Press the Right (**warmup**) key on the control panel.

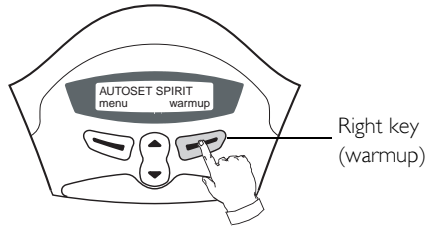

The following message is displayed for 2 seconds:



- ii. After 2 seconds the following screen is displayed indicating that the HUMIDAIRE 2i is warming.



iii. While the HUMIDAIRE 2i is in Warm-Up mode you can:

- Start treatment at any time by pressing the Front key.
- Access the menus by pressing the Left (**menu**) key.
- Stop the Warm-Up feature at any time by pressing the Right (**exit**) key.

-
- 3 Turn the humidity control dial to the desired setting. The control dial is labelled as shown in the diagram below. A setting of 1 provides minimum humidification, and a setting of 6 delivers maximum humidification. The setting marked with a **○** switches heated humidification off.

Initially, set the control dial to 3. If necessary adjust the control dial up or down to find the most comfortable and effective setting. You can adjust the humidity setting at any time.



Your aim is to have moist air delivered at your mask while avoiding condensation in the air tubing. Your ideal setting will depend on the temperature and humidity of the surrounding air.

See "Helpful Hints" on page 12 for further tips on the correct humidity setting.


- 4 Fit your mask as described in the mask user instructions.



WARNING

Before starting therapy ensure that you are wearing the the mask and that the mask and air tubing are fitted correctly.

- 5 Press the **Front** key on the control panel. Alternately, if the SmartStart function is enabled, simply breathe into the mask. Air should begin to flow from the device.

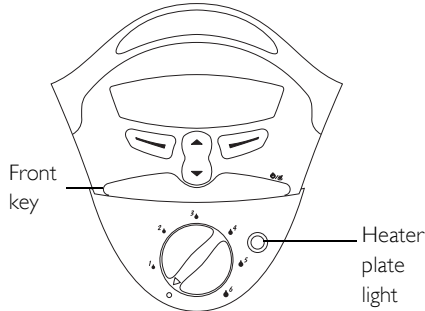

Note: During operation, the heater plate light illuminates periodically to indicate that the heating element is active. The **HUMIDAIRE 2i** has a rapid heating element which allows very short heating times. Do not be concerned if the light only flashes on very briefly.

- 6 Lie down and arrange the air tubing so that it is free to move if you turn in your sleep.



WARNING

Do not leave long lengths of air tubing around the top of your bed. It could twist around your head or neck while you are sleeping.

STOPPING TREATMENT

To stop treatment at any time, remove your mask and press the **Front** key. Alternately, if the SmartStart function is enabled, simply remove your mask and treatment will end. You may notice that the device continues to blow air gently after you have pressed the **Front** key to stop treatment. This continues for up to one hour to assist cooling of the heater plate. However, you can switch off the power at any time and allow the heater plate to cool without airflow.

HELPFUL HINTS

CONDENSATION IN THE MASK OR AIR TUBING

You may experience excessive condensation in the mask or air tubing. This may occur seasonally, particularly when the weather is cool. Turn the humidity control dial down until the condensation decreases.

Another cause of condensation is air blowing directly on the air tubing, for example from fans and air conditioning units. This causes the humidified air to quickly lose temperature, resulting in increased condensation. Avoid this situation when possible. Placing the air tubing under the bed covers with you may help prevent condensation. We recommend that you arrange the device so that any excess condensation drains back into the water chamber.

SYMPTOMS OF DRYNESS STILL PRESENT

If you still experience symptoms of dryness, then your humidity setting may be set too low to be effective. Gradually turn the humidity control dial up over a few nights until the symptoms disappear.

If you are still experiencing symptoms of dryness, even after increasing the humidity setting, you may be breathing through your mouth. Mouth breathing or mouth leaks cause drying and irritation of the upper airway. If this is a problem, a full face mask or chin strap may help. Consult your clinician or equipment supplier for details.

NASAL INFECTION OR ILLNESS

If you have a cold or nasal infection, be sure to clean the HUMIDAIRE 2i thoroughly each day. Do not put aromatic oils or decongestants into the water chamber.



CAUTION

Do not use additives, in particular aromatic additives (eg scented oils and perfumes). They may reduce the humidification output of the device and/or cause deterioration of the water chamber materials.

SCALY MINERAL DEPOSITS

You may notice a white powder or deposits in the water chamber base. These are mineral deposits from the tap water. To remove these deposits, rub the water chamber base gently using a mild washing detergent.

To prevent these deposits forming, fill the water chamber with demineralised water.

SEASONAL CHANGES

You may have to adjust your humidity setting from season to season, or if you travel to a different climate.

CLEANING AND MAINTENANCE

You should regularly carry out the cleaning and maintenance described in this section.



WARNING

Beware of electrocution. Do not immerse the device or power cord in water. Always unplug the device before cleaning and be sure that it is dry before plugging back in.

- 1 Turn the main power switch at the back of the device to OFF, and unplug the power cord from the power outlet.

- 2 Allow 10 minutes for the heater plate and any excess water to cool.

- 3 Remove the water chamber. To do this, lift the latch at the bottom of the water chamber and pull the water chamber away from the docking station.




WARNING

- Take care when handling the HUMIDAIRE 2i. The water in the water chamber may be hot.
- Do not touch the tub plate at the base of the water chamber while removing the water chamber from the docking station. It may be hot.


- 4 Discard any excess water by turning the water chamber upside down, allowing the water to drain out of the air outlet.

5 DISASSEMBLING THE WATER CHAMBER


- i. To open the side catches pull out from the lower edge.




- ii. Hold the water chamber as shown below:

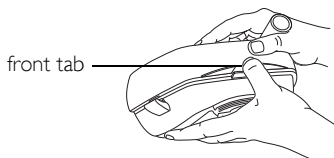

- iii. Separate the water chamber by pulling the two halves apart. Use your thumb to pull down on the front tab.

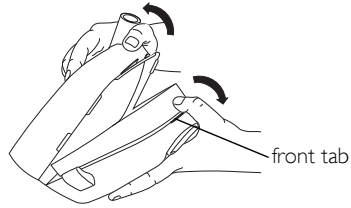


- iv. Remove the seal by peeling it away from the inside of the lid. .

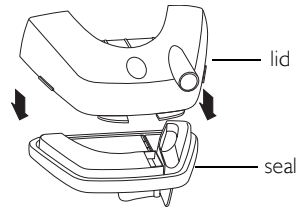

6 Discard any remaining water.

The tub plate does not need to be removed from the water chamber base. If removed, replace the tub plate by:

- Turning the water chamber base upside down.
- As shown below, position the tub plate so that the open side is facing down. Then firmly press the tub plate down into the water chamber.

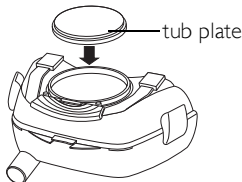

Note: The tub plate will not fit into the water chamber if it is facing up. Before fitting the tub plate, make sure the O-ring is fitted snugly inside the groove of the tub plate.

7 CLEANING

WATER CHAMBER

Wash the lid, seal and base in warm water using a mild detergent or in a dishwasher. Rinse them thoroughly with clean water and allow them to dry away from direct sunlight. Do this daily or after each use. Inspect the water chamber for wear and deterioration. Replace any damaged parts.

**CAUTION**

Do not use any of the following to clean any part of the HumidAire 2i. These solutions may cause damage and reduce the life of the product.

- bleach, chlorine-, alcohol-, or ammonia based solutions
- moisturizing, antibacterial, or glycerine based soaps
- water softening and descaling agents

If using a dishwasher, avoid heavy duty or high temperature cycles (greater than 70°C). Do not use strongly alkaline detergents and rinse aids.


DOCKING STATION

Wipe the outside of the docking station with a damp cloth. Do this periodically.


8 REASSEMBLING THE WATER CHAMBER

When all the water chamber parts are clean and dry, reassemble the water chamber:


- Fit the seal onto the rim of the water chamber base. Press along the edge to ensure that the seal is fitted properly.

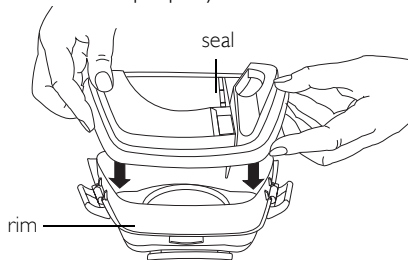

- Fit the lid onto the water chamber base. Press the lid and base firmly together to close.

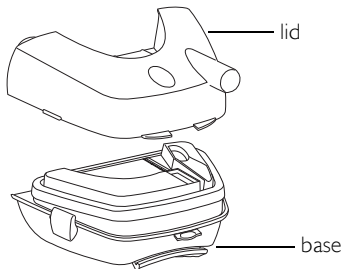


- To close the side catches see the illustrations below,

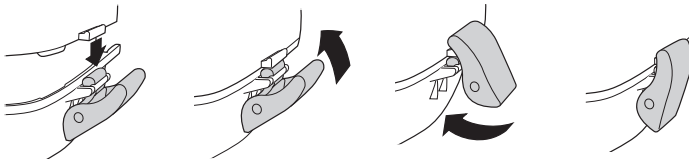


Note

If the side catches become detached from the water chamber base, reattach them as shown.

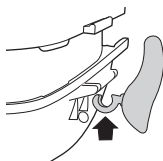

The side catches consist of two parts. If they become separated clip them back together as shown. Insert the smaller end (a) of the hinge (b) first, hold it flat, and press firmly into place.

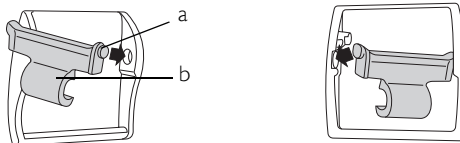

TROUBLESHOOTING

If there is a problem, try the following suggestions. If the problem cannot be solved, contact your equipment supplier or ResMed. Do not attempt to open the unit.



WARNING

Service and repair should only be performed by an authorised service agent. Under no circumstances should you attempt to service or repair the unit yourself

Problem	Possible Cause	Solution
Device not working (no display on LCD screen)	Power cord is not plugged in properly.	Check that the power cord is plugged firmly into the power outlet.
	Device not switched on.	Check that the switch at the back of the device is in the ON position.
	Faulty power outlet.	Try another power outlet.
Heater plate light not lighting up	The Front key on the device has not been pressed.	Press the Front key on the device to activate the heater plate.
	Control dial is in the OFF position.	Turn the control dial up from the OFF position.
Leaking water chamber	The water chamber may be damaged or cracked.	Contact your supplier for a replacement.
	The lid may not be on correctly.	Press the lid down firmly.
	Water chamber seal may be twisted.	Make sure the seal is seated properly inside the water chamber.
	Side catches are not engaged properly.	Make sure the two side catches are engaged properly.
	The tub plate is incorrectly fitted.	Make sure the tub plate is fitted correctly.

Problem	Possible Cause	Solution
No air flow	The air tubing is not connected properly.	Connect the air tubing as described in “Preparing For Use” on page 5.
	The air tubing is blocked, pinched or punctured.	Unblock or free the air tubing. Check the air tubing for punctures.
	The CPAP, APAP or bilevel device is not working correctly.	See the Troubleshooting section in the CPAP, APAP or bilevel device manual.
	The water chamber is overfilled.	Empty some water from the water chamber. Make sure that the water level is not above the maximum water level mark.
Water splashing on your face	The water chamber is overfilled.	Empty some water from the water chamber.
	The control dial is set too high and condensation is forming in the air tube and mask.	Turn the control dial down.
	Air blowing on the air tubing (from fans and air conditioning units) is causing condensation.	Insulate the air tubing. Placing the air tubing under the bed covers may help prevent condensation.
Air does not feel moist	The control dial is set too low.	Turn the control dial up.
	HUMIDAIRE 2i heating element is not working.	Contact your equipment supplier.
Air too moist	Control dial is set too high.	Turn the control dial down.
	High ambient relative humidity.	Adjust your humidity setting.

TECHNICAL SPECIFICATIONS

PERFORMANCE

Maximum heater plate temperature: 75°C

Temperature cut-out: 93°C

Maximum output humidity: 95% relative humidity (control dial set to maximum setting, flow rate 50 L/min, ambient temperature of 20°C, ambient relative humidity of 40%).

DIMENSIONS (H X W X D)

123mm x 218mm x 183mm (docking station and water chamber)

WEIGHT

900g (docking station and unfilled water chamber)

POWER SUPPLY

Input range for **AUTOSET SPIRIT** Unit with **HUMIDAIRE 2i**: 100–240V, 50–60Hz, <528VA (maximum power consumption)

Actual power consumption will vary, depending on factors such as temperature setting, set pressure, the use of accessories, height above sea level and ambient temperature.

HOUSING CONSTRUCTION

Docking station: Flame retardant engineering thermoplastic

Water chamber: Injection molded plastic

ENVIRONMENTAL CONDITIONS

Operating temperature: +5°C to +40°C

Operating humidity: 10–95% non-condensing

Storage and transport temperature: -20°C to +60°C

Storage and transport humidity: 10–95% non-condensing

IEC 60601-1 CLASSIFICATION

Class II (double insulation)

Type CF

ELECTROMAGNETIC COMPATIBILITY

Product complies with all applicable electromagnetic compatibility requirements (EMC) according to IEC60601-1-2, for residential, commercial and light industry environments.

Note: *The manufacturer reserves the right to change these specifications without notice.*

SYMBOLS WHICH APPEAR ON THE DEVICE



Attention, consult accompanying documents



Type CF applied part



Class II equipment



Drip Proof



Hot Surface



Do not touch



Maximum water level

INDEX

C

Cleaning 13
Contraindications 1
control dial 10

D

Definitions 1
Dimensions 19

E

Electromagnetic Compatibility 20
Environmental conditions 19

H

Helpful Hints 12
Housing Construction 19

I

IEC 60601-1 Classification 19
Intended Use 1

M

Medical Information 1

O

Operating Instructions 9

P

Performance 19
Power Supply 19
Preparing for Use 5

S

Setting Up 5
SmartStart 11
Starting Treatment 9
Symbols Which Appear on the Device 20

T

Technical Specifications 19
Troubleshooting 17

U

User/Owner Responsibility 1

W

Warm-Up Feature 9
Warnings and Precautions 2

water chamber
 reassembling 15
Weight 19